

PERFECTING THE VISION OF HEAT

TS100/TRS105


# **Boarmaster 40/55XR**


Thermal Imaging Riflescope

## **QUICK START GUIDE**



# 2 BUTTON FUNCTIONS

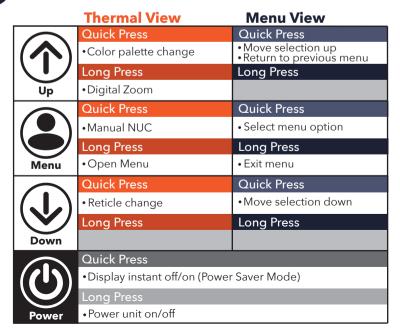

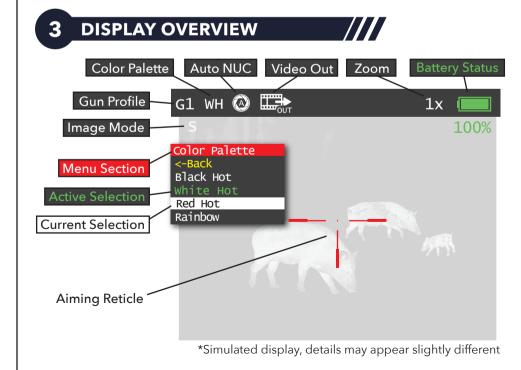

### **4** USING THE MENU

- To access the menu, long press the Menu (2) button for 2-3 seconds
- Use the Up ( ) and Down ( ) buttons to navigate the menu options
- Quick press the Menu (2) button to select an option
- To return to the previous menu, use the Up ( ) button to select the <-Back option
- To quickly exit the menu, long press the Menu (2) button

#### Main Menu

### Image Mode

Standard Enhanced Search/Track/Rescue User Defined

#### Color Palette

White Hot Black Hot Red Hot Rainbow

#### Sighting

Select Gun Zero the Scope Reticle Type Reticle Color Reticle Brightness

#### Settings

Automatic NUC | Blind Pixel Correction | Auto Power Off | Menu Transparency

## 6 GUN ZEROING & SAVING PROFILES ///

To zero your scope, go to the **Sighting** menu. Begin by selecting a Gun Profile (G1-G5). Gun Profiles are used to remember your zeroing adjustment and other settings. The device will allow you to save up to five different zeros, one for each Gun Profile.

- 1 Select the gun profile you would like to modify, default is G1
- 2 If desired, make changes to reticle type, color and brightness (not required). These will all be saved to the selected gun profile.
- 3 Set up your zeroing target at **50yds**.
- 4 Select Zero the Scope to enter the zeroing adjustment screen
- Use the Up-Down (elevation) and Left-Right (windage) selections to adjust your scope's aiming point. Current adjustment amount is displayed at the top of the screen, cumulative adjustment is shown below it. Once adjustment is done, press the Menu (a) button to save the setting and return to the zeroing screen.

  Note: Digital zoom may be used during sight-in.
- When done zeroing, back out of menu to save settings and return to normal operation mode.

## **5** IMAGE MODE & PALETTE

### **Image Modes**

To change the thermal image mode, open the Menu and navigate to the Image Mode submenu. There are four available image modes:

Standard	Default contrast, useful for general observation
Enhanced	Heightened contrast further highlights temperature differences, making potential targets stand out strongly
Search/Track/Rescue	This exclusive mode provides the highest level of contrast, displaying only potential targets of interest
User Defined	This setting allows you to create a custom Image Mode and save it

#### **Color Palettes**

To change the color palette, from the Thermal View quick press the Up (1) button, or open the Menu and navigate to the Color Palette menu. There are four available color palettes:









To learn about additional settings and advanced options, please view the

## **FULL PRODUCT MANUAL**

**Boarmaster 40 Manual** 

**Boarmaster 55XR Manual**