


Boarmaster 40 PRO


Thermal Imaging Riflescope

QUICK START GUIDE



2 BUTTON FUNCTIONS

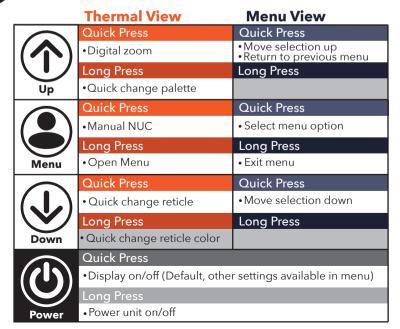

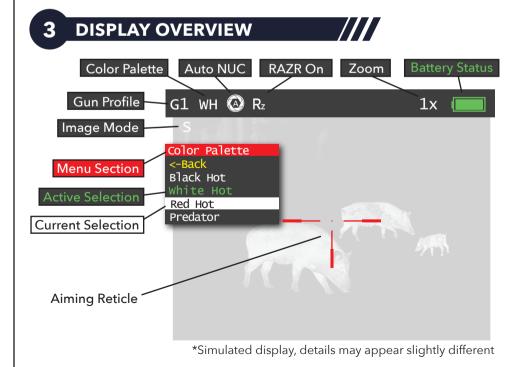

4 USING THE MENU

- To access the menu, long press the Menu (2) button for 2-3 seconds
- Use the Up (() and Down () buttons to navigate the menu options
- Quick press the Menu (2) button to select an option
- To return to the previous menu, use the Up (♠) button to select the <-Back option
- To quickly exit the menu, long press the Menu (2) button

Main Menu

Image Mode

Standard Enhanced Search/Track/Rescue User Defined

Color Palette

White Hot Black Hot Red Hot Predator

Sighting

Select Gun Zero the Scope Reticle Type Reticle Color Reticle Brightness

Settings

Automatic NUC RAZR Blind Pixel Correction Auto Power Off

Menu Transparency Zoom Value Image Device Factory Reset About the Device

5 IMAGE MODE & PALETTE

Image Modes

To change the thermal image mode, open the Menu and navigate to the Image Mode submenu. There are four available image modes:

	Standard	Default contrast, useful for general observation
	Enhanced	Heightened contrast further highlights temperature differences, making potential targets stand out strongly
	Search/Track/Rescue	This exclusive mode provides the highest level of contrast, displaying only potential targets of interest
	User Defined	This setting allows you to further customize the image display settings and save to multiple User Profiles

Palettes

To change the thermal palette, from the Thermal View quick press the Up (1) button, or open the Menu and navigate to the Palette submenu. There are four available palettes:









6 GUN ZEROING & PROFILES

From the **Sighting** menu, you can easily zero your scope as well as select reticle type, color, and brightness. These settings can be saved to up to five different gun profiles (G1 - G5).

- 1 Select the gun profile you would like to modify, default is G1
- 2 Make the desired changes to reticle type, color and brightness. These will all be saved to the selected gun profile.
- 3 Set up your zeroing target at **50yds**.
- 4 Select Zero the Scope to enter the zeroing adjustment screen
- Use the Up-Down (elevation) and Left-Right (windage) selections to adjust your scope's aiming point. Current adjustment amount is displayed at the top of the screen, cumulative adjustment is shown below it. Once adjustment is done, press the Menu (a) button to save the setting and return to the zeroing screen. Digital zoom may be used during sight-in.

To learn about additional settings and advanced options, please view the

FULL PRODUCT MANUAL

Boarmaster 40 PRO Manual