
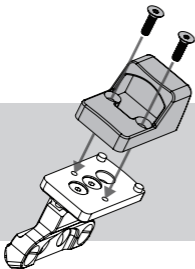
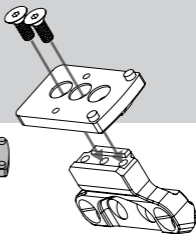



⚠️ ENSURE FIREARM IS UNLOADED

⚠️ **WARNING:** Over-torquing fasteners can damage your mount and will not be covered by warranty.

Hand-fit FAST™ Offset Base and Optic Plate to Fusion Thermal Scope Mount to determine placement and forward/rearward bias. Install Optic Plate to Offset Arm with included hardware (finger tight, then another 1/8 - 1/4 turn). TORQUE TO 18 IN-LBS.



Install Optic with included hardware (finger tight, then another 1/8 - 1/4 turn). REFER TO OPTIC MFGR TORQUE SPECS

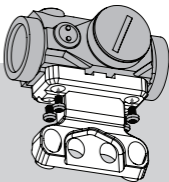

Install completed FAST™ Offset Base assembly onto Fusion Scope Mount with 2x small 6-32 screws. TORQUE TO 15 IN-LBS.

